
M18 Photo-electric sensors - Straight or 90° angled version

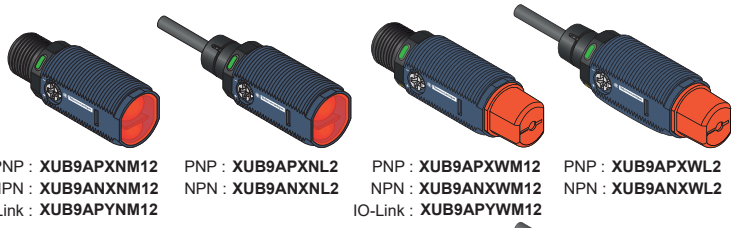


PNP : **XUB9APXNM12** | PNP : **XUB9APXNL2** | PNP : **XUB9APXWM12** | PNP : **XUB9APXWL2**
NPN : **XUB9ANXNM12** | NPN : **XUB9ANXNL2** | NPN : **XUB9ANXWM12** | NPN : **XUB9ANXWL2**
IO-Link : **XUB9APYNM12** | IO-Link : **XUB9APYWM12**



PNP : **XUB9BPXNM12** | PNP : **XUB9BPXNL2** | PNP : **XUB9BPXWM12** | PNP : **XUB9BPXWL2**
NPN : **XUB9BNXNM12** | NPN : **XUB9BNXNL2** | NPN : **XUB9BNXWM12** | NPN : **XUB9BNXWL2**
IO-Link : **XUB9BPYNM12** | IO-Link : **XUB9BPYWM12**

To choose your sensor, scan the 2D code on the right

Polarised reflex

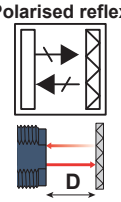

Model	D
XUB9 Axial	7 m / *23 ft*
XUB9 Radial	5,5 m / *18 ft*

Package Content
(Example)





http://qr.tesensors.com/XU0022

Scan the code to access this Instruction Sheet and all product information in different languages or you can visit our website at: www.telemecaniquesensors.com

We welcome your comments about this document. You can reach us through the customer support page on your local website.

⚠⚠ DANGER

HAZARD OF ELECTRIC SHOCK, EXPLOSION OR ARC FLASH

- Disconnect all power before servicing equipment.
- Do not connect this device to AC power.
- The power voltage must not exceed the rated range.

Failure to follow these instructions will result in death or serious injury.


⚠ WARNING

IMPROPER SETUP OR INSTALLATION

- This equipment must only be installed and serviced by qualified personnel.
- Read, understand, and follow the compliance below, before installing the XUB Photo-electric sensor.
- Do not tamper with or make alterations on the unit.
- Comply with the wiring and mounting instructions.
- Check the connections and fastening during maintenance operations.
- The proper functioning of the XUB photoelectric sensor and its operating line must be checked regularly and according to the application (for example number of operations, level of environmental pollution, etc.).

Failure to follow these instructions can result in death, serious injury, or equipment damage.


Mounting and tightening torques

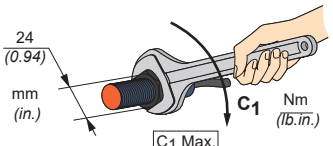


	C1 Max.
XUB9A●●●	1 (8.85)
XUB9B●●●	2 (17.7)

⚠ CAUTION

DEGREE OF PROTECTION DETERIORATION
Do not apply excessive tightening torque on the sensor during the installation process.
Failure to follow these instructions can result in injury or equipment damage.

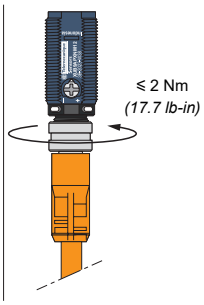

LEDs and settings

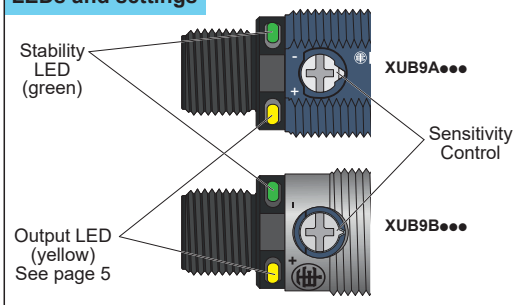

Wiring diagrams


M12 Connector - 4 pins



Control input IN
(Pin 2 or grey wire):
(+) = NO
(-) = NC
Open = NO

2 m Cable - 4 wires



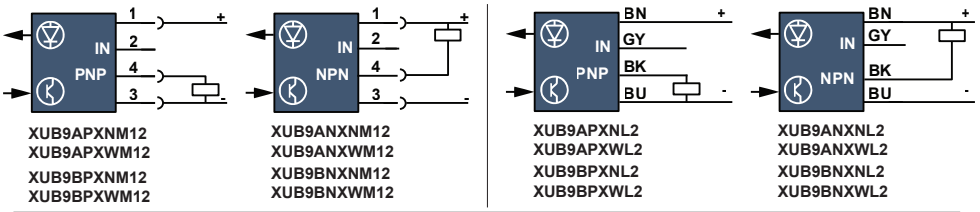


XUB9APXNM12
XUB9APXWM12
XUB9BPXNM12
XUB9BPXWM12

XUB9ANXNM12
XUB9ANXWM12
XUB9BNXNM12
XUB9BNXWM12

XUB9APXNL2
XUB9APXWL2
XUB9BPXNL2
XUB9BPXWL2


XUB9ANXNL2
XUB9ANXWL2
XUB9BNXNL2
XUB9BNXWL2

IO-Link



Pin	Signal	Definition
1	+	+ 24 Vdc
2	IN	+ = NO - = NC Open = NO
3	-	0 Vdc
4	Q	Switching signal (SIO)
	C	Communication IO-Link

Auto-Detect NPN / PNP

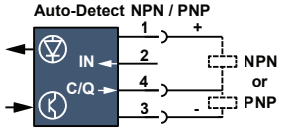

XUB9APYNM12
XUB9APYWM12
XUB9BPYNM12
XUB9BPYWM12


⚠ CAUTION

INOPERABLE EQUIPMENT DUE TO CYBER ATTACK ON IO-LINK
- Apply external cybersecurity protection on IO-Link Master device.
- Download IO-Link Description files only from these web severs: https://telemecaniquesensors.com/global/en/support/iolink or https://ioddfinder.io-link.com/#/

Failure to follow these instructions can result in injury or equipment damage.


IO-Link data tables and IODD files are online : Scan the 2D code, above


Mounting, wiring and maintenance precautions

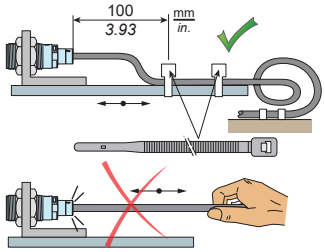

NOTICE

REDUCTION OF SERVICE LIFE
Do not pull on the sensor cable.
Failure to follow these instructions can result in equipment damage.

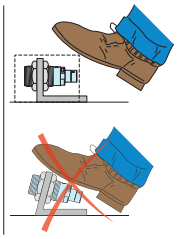

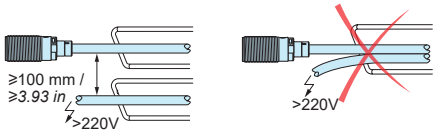



Our product should be installed, operated and maintained only by qualified personnel. Neither TMSS France nor any of its subsidiaries or other affiliated companies shall be responsible or liable for any consequences arising out of the use of this material. Telemecanique™ Sensors is a trademark of Schneider Electric Industries SAS used under license by TMSS France. Any other brands or trademarks referred to in this document are property of TMSS France or, as the case may be, of its subsidiaries or other affiliated companies. All other brands are trademarks of their respective owners.


© 2025 TMSS France. "All Rights Reserved."

Telemecanique Sensors


Dimensions

mm / in.


1 mm = *0.0393 in.*

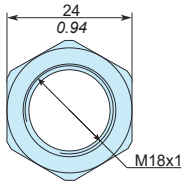


XUB●A●XNL2

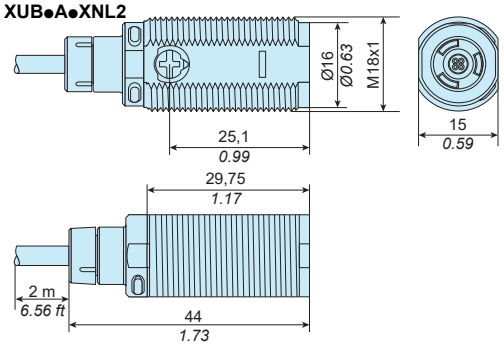


XUB●A●XWL2

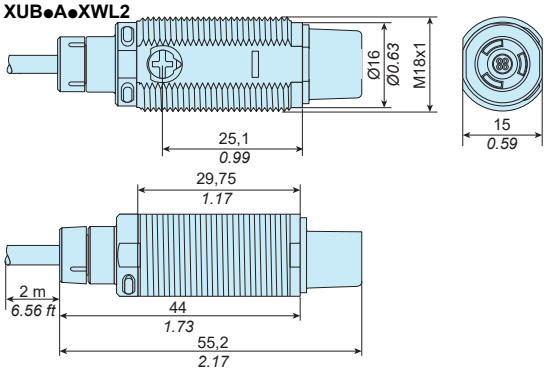


XUB●A●XNM12 / XUB●A●YNM12

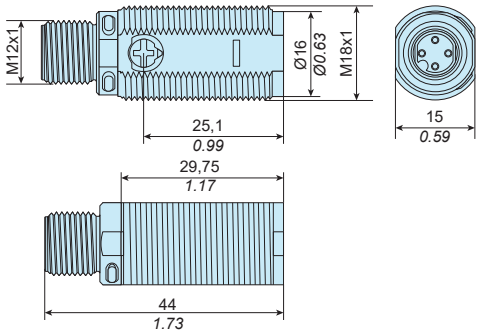


XUB●A●XWM12 / XUB●A●YWM12

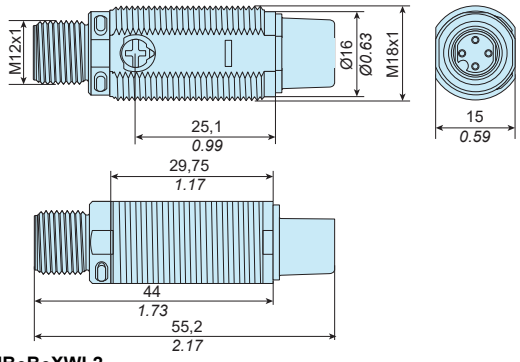


XUB●B●XNL2

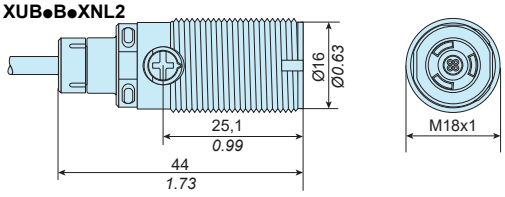


XUB●B●XWL2

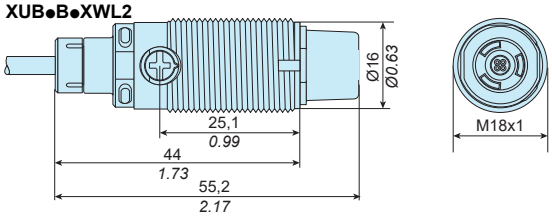


XUB●B●XNM12 / XUB●B●YNM12

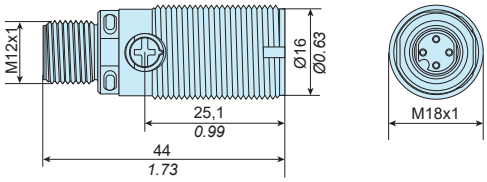


XUB●B●XWM12 / XUB●B●YWM12

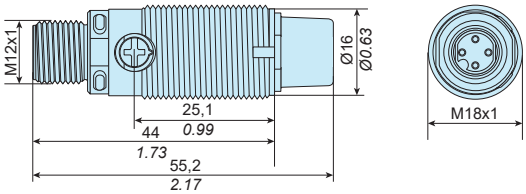


XUZA118

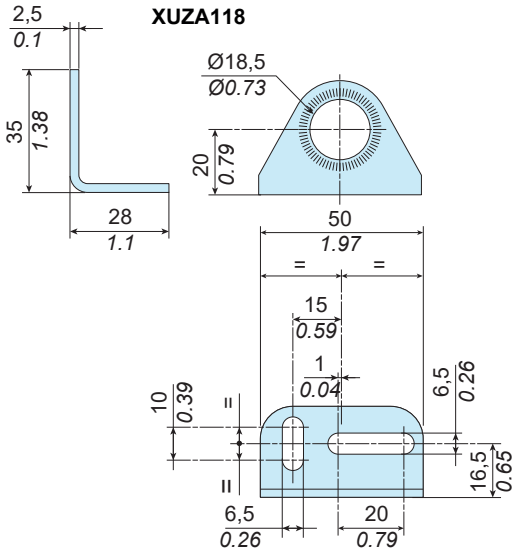


XUZA218

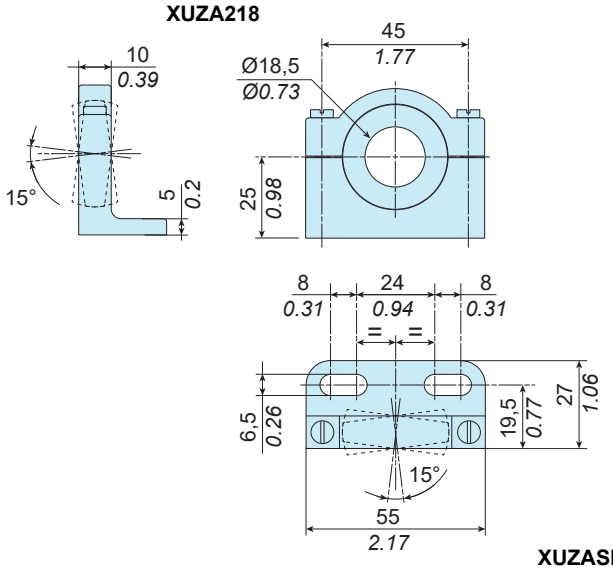


XUZASB001

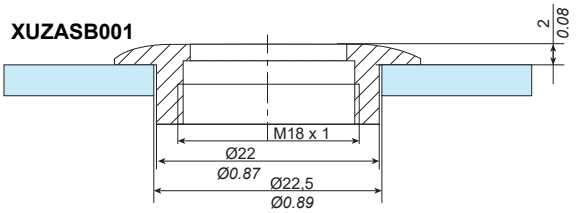

XUZASB002

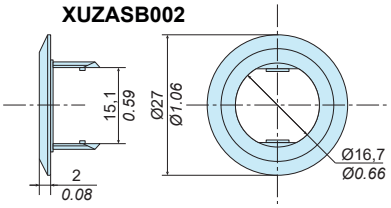


XUZASB003

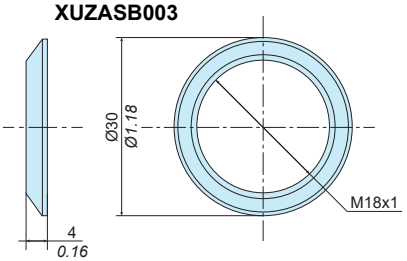


Accessories


Mounting brackets (to order separately)


XUZA118

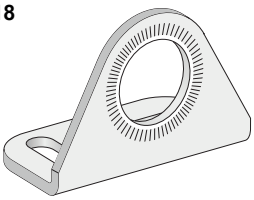

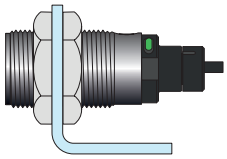


XUZA218

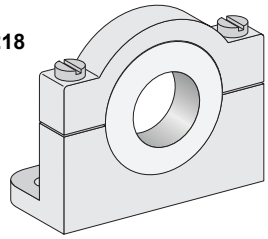

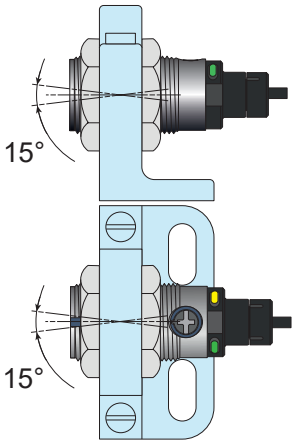

XUZASB001

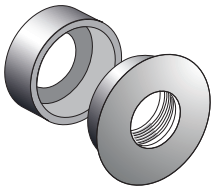


(See Instruction Sheet: EAV2211101)

XUZASB002




XUZASB003

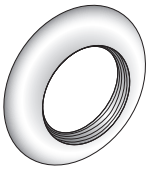


Reflector examples (to order separately)


XUZC50

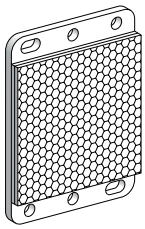


XUZC60S11

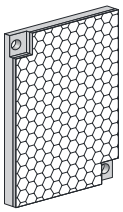


XUZC39

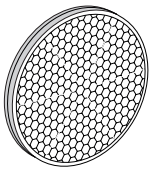

XUZC24




XUZC100

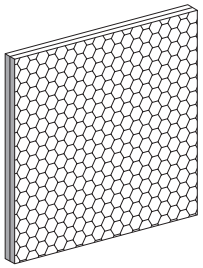


Reflectors Dimensions

mm
in.


XUZC50

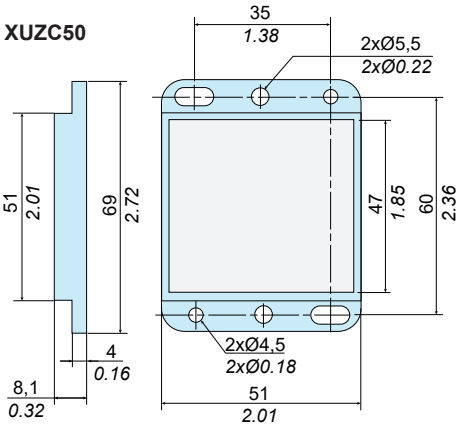


XUZC60S11

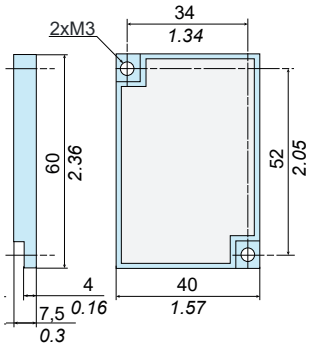


XUZC39

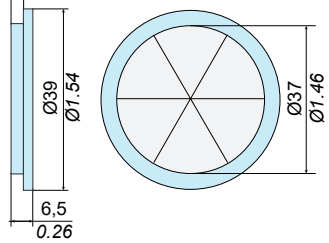

XUZC24

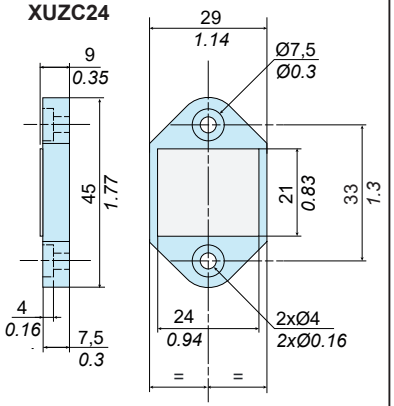


XUZC100

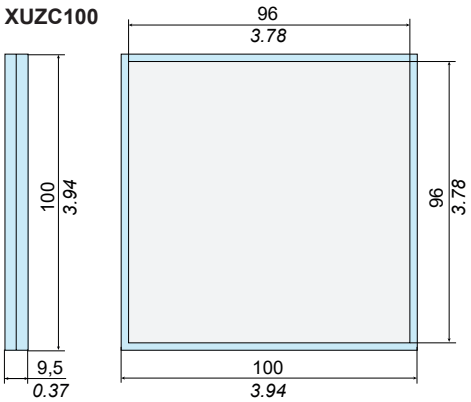


Pre-Wired connectors (examples)

PVC cable for general use
PUR cable for severe industrial environments

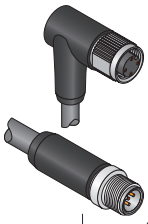
M12, 4 pins					M12 - M12, 4 pins				
									
Cable length	PVC	PUR	PVC	PUR	Jumper length	PVC	PUR	PVC	PUR
2 m / *6.56 ft.*	XZCPV1141L2	XZCP1141L2	XZCPV1241L2	XZCP1241L2	1 m / *3.28 ft.*	XZCRV1511041C1	XZCR1511041C1	XZCRV1512041C1	XZCR1512041C1

Other cable references are available in our online catalog. Please visit our website at: **www.telemecaniquesensors.com**
Or you can ask us through the customer support page on your local website.

Cable direction with angled connector

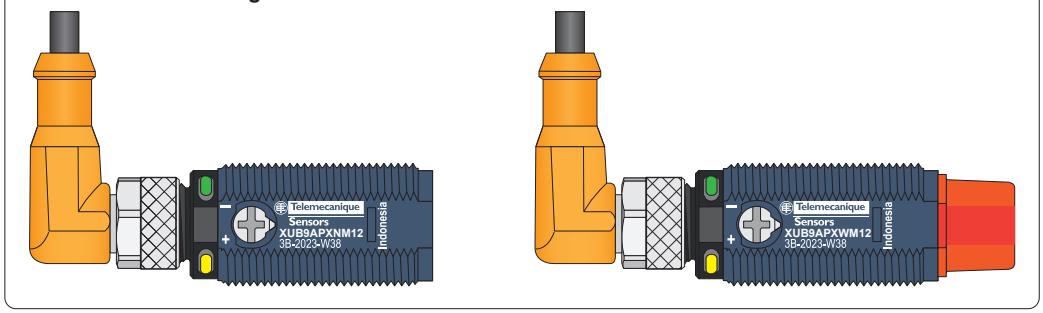


Sensor position adjustment

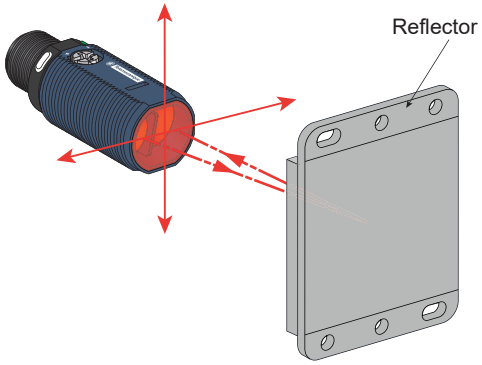


- Translate the sensor or reflector, up/down and left/right. When the setting is optimal, the Stability LED (green) is lit.
- Check sensor operation with the object and adjust the sensor, if necessary.

LED status with NO output function

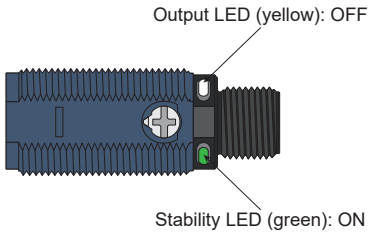


Anti-interference for side by side and face to face (only for reflex model) mounting

Note: For interference video, scan the code in the first page

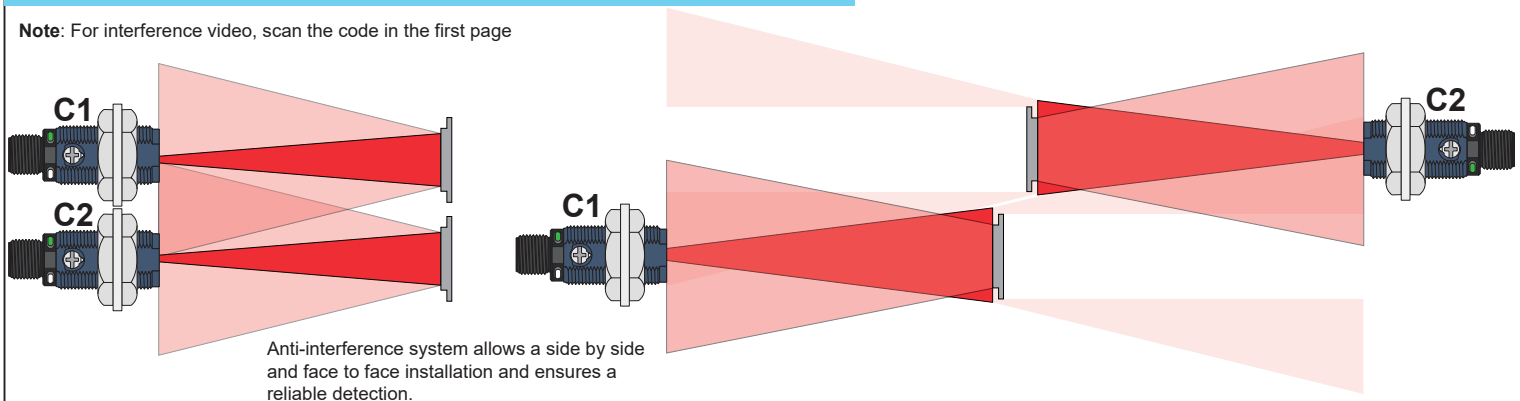


Anti-interference system allows a side by side and face to face installation and ensures a reliable detection.

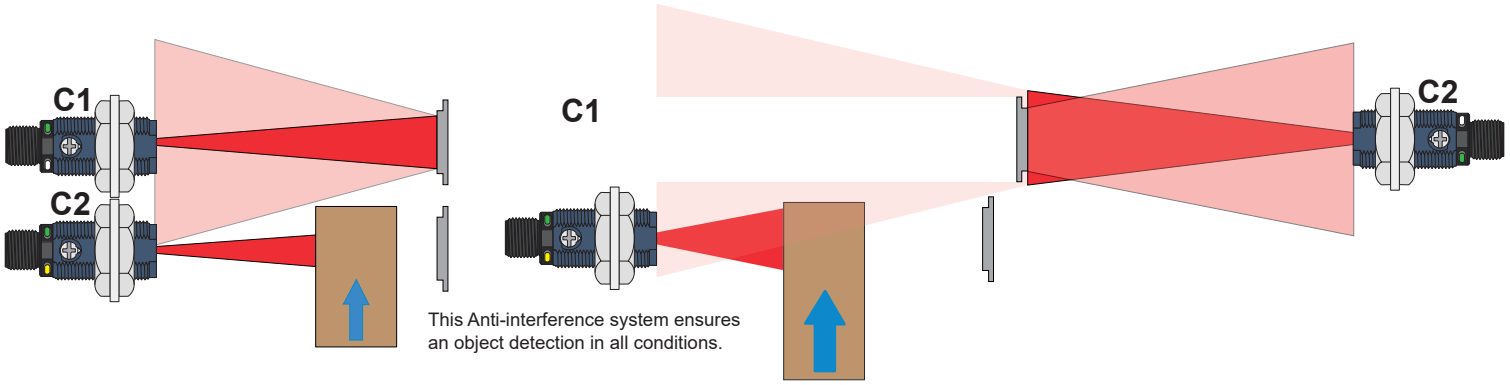

This Anti-interference system ensures an object detection in all conditions.


Diagnostic LEDs





[1]: Only for IO-Link version



	LED		Description	Corrective Action
Output LED (yellow)	Blinking[1]	2 Hz	Communication issue detected	Perform a Power Off/Power On cycle. The sensor restarts with factory settings.
		3 Hz	Output short-circuit Output overload Undervoltage Overtemperature	Remove the short circuit Verify that the load current is < 100 mA Verify that the sensor power voltage is 12...24 Vdc Reduce ambient temperature of the sensor or replace the sensor.
	ON		Sensor output is ON	-
	OFF		Sensor output is OFF	
Stability LED (green)	OFF		Inconsistent quality of detection	Check the sensor sensitivity adjustment (See next page).
	Dim			
	Bright		Consistent quality of detection	-

Output mode setting: NO or NC (NO by default)











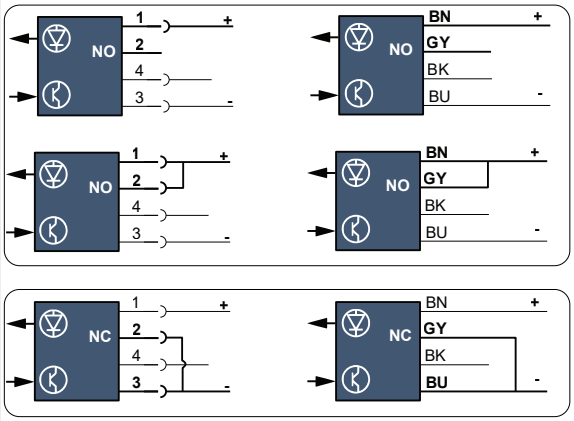


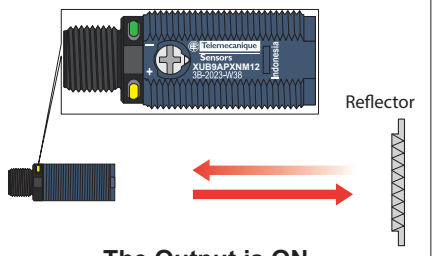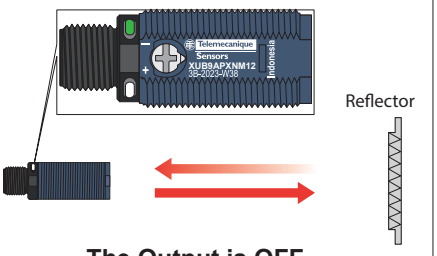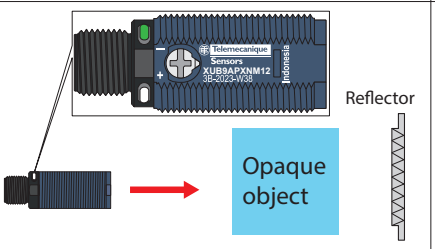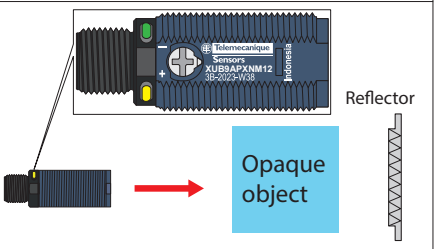Light-On / Normally Closed (NC)	Dark-On / Normally Open (NO)
 **The Output is ON**	 **The Output is OFF**
 **The Output is OFF**	 **The Output is ON**

Sensor sensitivity adjustment

For accurate detection, follow the configuration below. (eg. Reflective objects, with holes or small size to obstruct the reflection of the light beam).


Note: How to install in video, scan the code on the first page

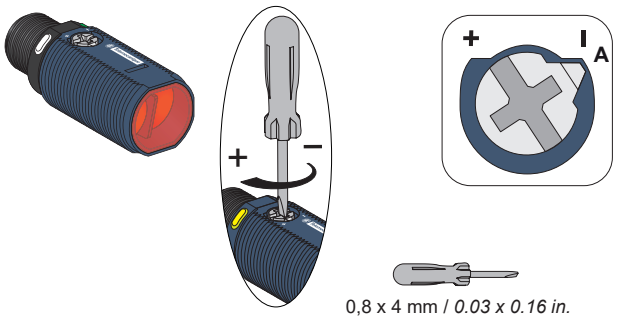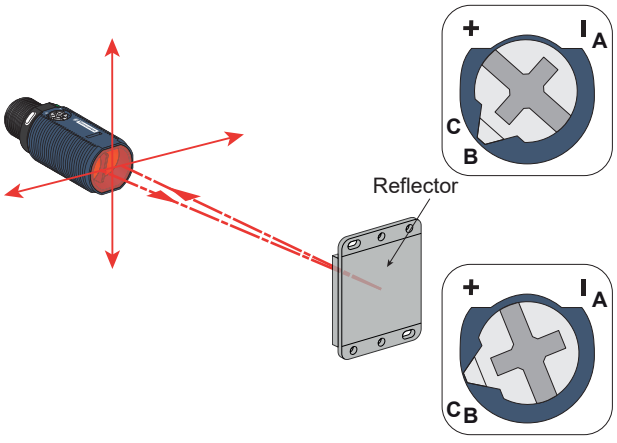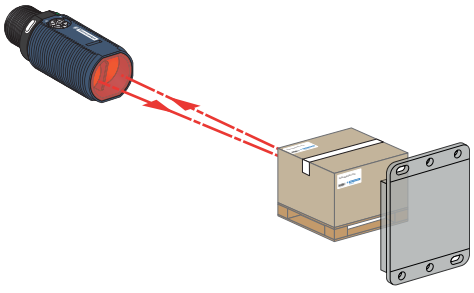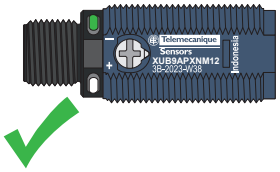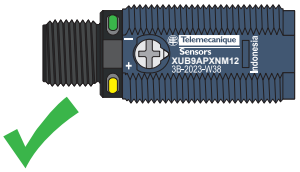	Light-On / Normally Closed (NC)	Dark-On / Normally Open (NO)
 0,8 x 4 mm / *0.03 x 0.16 in.*	1-Connect the sensor to the power supply *(see page 1 for the wire connection & page 7 for the power voltage)*. Before settings, start with the potentiometer at the minimum position (resulting to point A). 	1-Connect the sensor to the power supply *(see page 1 for the wire connection & page 7 for the power voltage)*. Before settings, start with the potentiometer at the minimum position (resulting to point A). 
	2-Put the reflector in front of the sensor. Turn the potentiometer clockwise until the Output LED (yellow) switches on: the reflector is detected (resulting to point B).  Continue to turn the potentiometer clockwise until the Stability LED (green) switches on (resulting to point C). 	2-Put the reflector in front of the sensor. Turn the potentiometer clockwise until the Output LED (yellow) switches off: the reflector is detected (resulting to point B).  Continue to turn the potentiometer clockwise until the Stability LED (green) switches on (resulting to point C). 
	3-Put the object between the sensor and the reflector. Make sure the Output LED (yellow) switches off and the Stability LED (green) is on. This ensures a good stability of detection. The Sensor is set and ready to detect. 	3-Put the object between the sensor and the reflector. Make sure the Output LED (yellow) switches on & the Stability LED (green) is on. This ensures a good stability of detection. The Sensor is set and ready to detect. 


During the set up process, the output is acting as the yellow LED

Detection curves

Angle - Polarized Retro-reflective XUB9

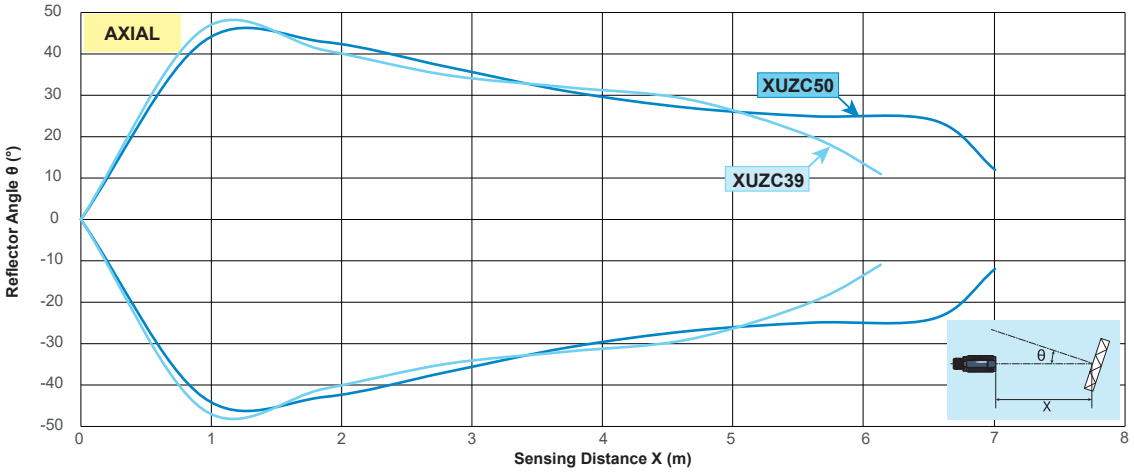


XUZC50

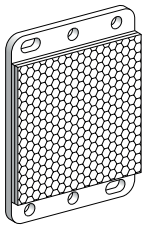



XUZC39



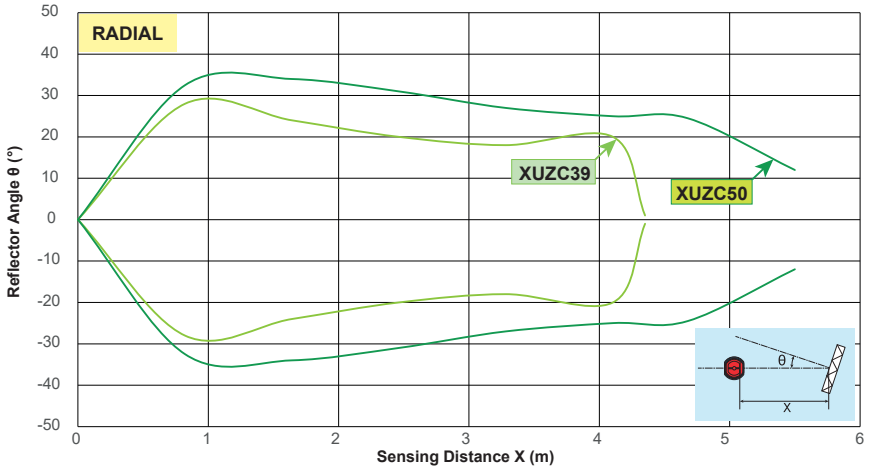


Lateral Displacement - Polarized Retro-reflective XUB9

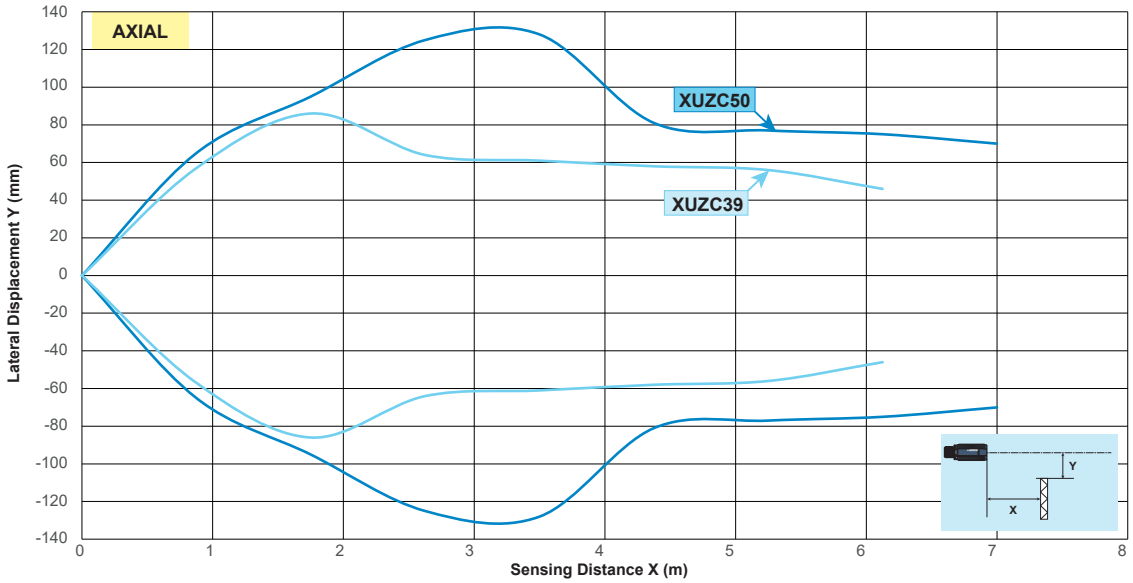

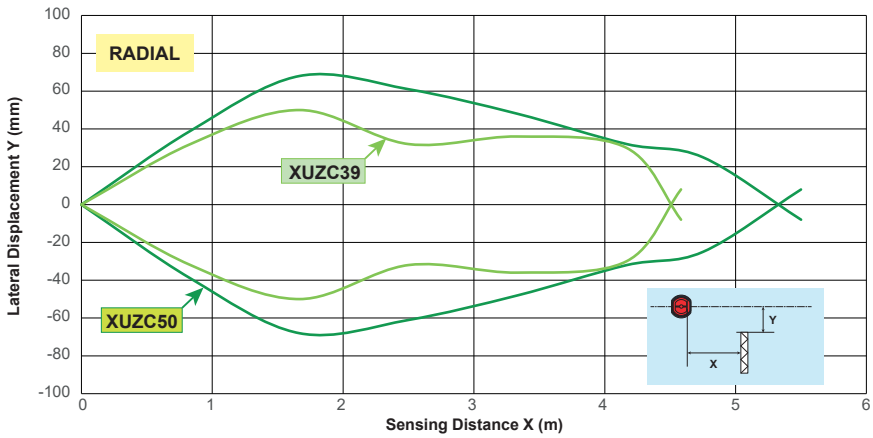

Detection curves

Excess Gain - Polarized Retro-reflective XUB9

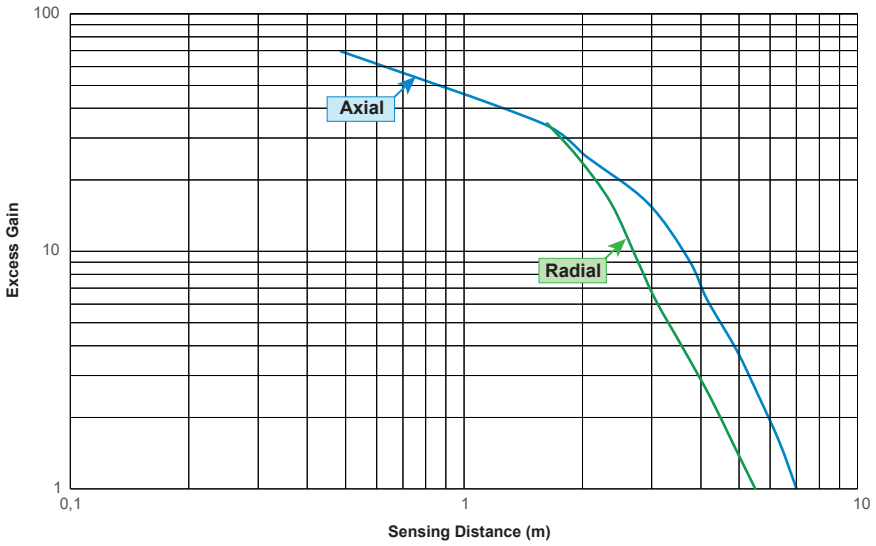

Characteristics

1 mm = *0.0393 in.*

Certification	CE - UKCA - cULus
Sensing Range (using a 50 mm x 50 mm reflector **XUZC50**) Excess gain = 1: Maximum sensing distance	XUB9 axial: Excess gain 1= 7m Excess gain 2= 5m XUB9 radial: Excess gain 1= 5,5m Excess gain 2= 4m
Color of dectection light beam	Red
Blind zone	0 mm using a 50 mm x 50 mm reflector **XUZC50** (for the reflector - no blind zone for objects)
Sensing distance setting	Potentiometer 1 turn (~ 220 degrees)
Output type	PNP / NPN or Autodetect PNP / NPN (with IO-Link)
ON Voltage drop	2 V max. (30 Vdc 100 mA)
Current consumption	< 20 mA / IO-Link: <30mA
Switching capacity	100 mA
First-up delay	< 100 ms / IO-Link < 300 ms
Response time	0,5 ms max.
Recovery time	0,5 ms max.
Switching frequency	1000 Hz (In SIO Mode for IO-Link)
Electrostatic discharge immunity	4 kV (Contact), 8 kV (Air) conforming to **IEC 61000-4-2**
Electromagnetic field immunity	10 V/m conforming to **IEC 61000-4-3**
Fast transients immunity	Burst 2 kV - 5 kHz conforming to **IEC 61000-4-4**
Conducted disturbances immunity	10 V conforming to **IEC 61000-4-6**
Radiated disturbances emissions	Class A conforming to **EN 55011 / CISPR 11**
Power Voltage	Rated operational voltage: 12...24 Vdc Operating range: 10...30 Vdc (including ripple p-p 10% maximum)
Product protection	Power supply : Reverse polarity protection Output: Short circuit protection Reverse polarity protection
Light Immunity	Sunlight 40 kLx max. Incandescent light 10 kLx max.
Artificial optical radiation	Class 0 (Risk exempt) conforming to **IEC 62471**
Ambient Temperature	Operating : - 30...+55 °C *(-22...+131 °F)*, Storage : - 40...+70 °C *(-40...+158 °F)*
Ambient Humidity	Operating : 35...95% RH, Storage : 35...95% RH
Degree of protection	**IP65**, **IP67** conforming to **IEC 60529** - **IP69K** conforming to **DIN 40050-9** (only for M12 connector version)
Vibration resistance	Frequency range: 10 Hz to 55 Hz Acceleration: 7 g_n
Shock resistance	Peak acceleration: 30 g_n Duration of the pulse: 11 ms
Material	Housing: PBT/PC or Brass, Transparent Cover: PMMA, Back cap: MABS, Potentiometer screw: PBT Cable: PVC (for cable version) Plug (cable version): PA66

Manufacturer :
TMSS France
Tour Eqho - 2 avenue Gambetta
92400 Courbevoie
France

UK Representative :
Yageo TMSS UK Limited
2 North Park Road
Harrogate, HG1 5PA
United Kingdom